

thermometer

-

U

U Accuracy $\pm 1^{\circ}\text{C}$ $\pm 2^{\circ}\text{F}$

U Display Resolution 0.1°C 0.2°F

U Accuracy $\pm 1^{\circ}\text{C}$ $\pm 2^{\circ}\text{F}$

U Display Resolution 0.1°C 0.2°F

U Accuracy $\pm 1^{\circ}\text{C}$ $\pm 2^{\circ}\text{F}$

U Display Resolution 0.1°C 0.2°F

U Accuracy $\pm 1^{\circ}\text{C}$ $\pm 2^{\circ}\text{F}$

U Display Resolution 0.1°C 0.2°F

-

BUTTONS & OPERATIONS

U MIN / MAX

* Press **MAX / M** to hold the maximum reading.

* Press **M / M** to hold the minimum reading.

◆ ROOM / FRIDGE

* Press **ROOM / FRIDGE** to toggle between room and fridge modes.

U

◆ ALERT

* Press **ALERT** to set a 3-minute alert.

* Press **°C / °F** to toggle between Celsius and Fahrenheit.

U **°C / °F**

U **°C** / **°F** to toggle between Celsius and Fahrenheit.

BATTERY

Use AAA batteries. The battery cover is located on the back of the device.