

SN119 Refrigerator Thermometer

Temperature range: - 20°C to 60°C

- If temperature lower than -20°C, it will display: "LL.L"
- If temperature higher than 60°C, it will display: "HH.H"

PLACEMENT OF BATTERY

- Rotate battery cover anticlockwise to open it.
- Remove the pvc tongue protective on the battery.
- Close battery cover and rotate clockwise to arrow position. The clock is enabled.
- When the screen displays nothing, please install new battery 1 x CR2032, respect the polarity.

FROST ALERT

- FROST ALERT range: 4.0°C to 7.9°C
- When it runs within this limit, the frost icon will appear on the screen.

FUNCTION

- Display the current temperature « °C / °F »
- Press button "ON/OFF" to turn on or turn off the screen display.
- Press button « °C /°F » to switch the temperature between Celsius or Fahrenheit unit.
- With the foldable hook and the magnets on back of thermometer.